



Operating Instructions

Axial Blower Attachment



WARNING: To reduce the risk of injury, fire, or electric shock, please read and understand the operating instructions for this product.


Save these instructions for future reference.

Axial Blower Attachment

The blower is fully assembled and ready for use once connected to an attachment capable power head.



Connecting the Blower Attachment

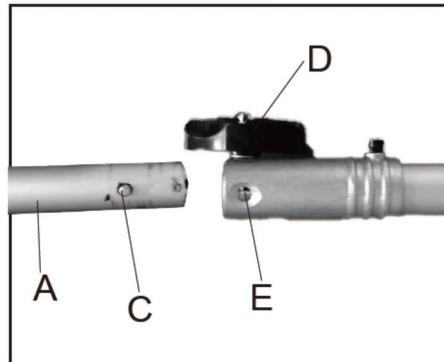

1. Align the pin (C) with the corresponding hole in the power head shaft (E).
2. Inset the shaft (A) to the shaft of the power head until the pin engages the hole (E).
3. Tighten the knob (D) to securely lock the attachment to the power head shaft.

Blower Use:

Use the blower only for dry leaves.

Work at a steady walking pace.

Keep the blower nozzle free from obstructions.

Stop the machine if it makes unusual noises or high levels of vibration. Unusually high levels of vibration may cause injury to the user or damage to the blower.

Keep the air nozzle close to the ground and move forward with side-to-side swinging motions.

Blow the leaves into a suitable heap.

Wait until the machine has come to a standstill before removing the blower attachment.