



## **INSTALLATION INSTRUCTIONS:**

### **SIDE BAGGER**

**088-1910-00, 088-1910-50**

WILL FIT: ALL MZ, MAGNUM AND STAND ON MOWERS





**STEP 1: REMOVE THE MOWER CHUTE.**



- Remove and retain the three carriage bolts that secures the grass chute to the deck.

**STEP 2: INSTALL THE SIDE BAGGER FRAME.**



- Replace the grass chute with the side bagger frame.



- Align the corresponding holes of the frame bracket with the holes in the deck.
- Push the frame snug to the deck.
- Secure the side bagger frame using the carriage bolts and nuts previously removed.

**STEP 3: INSTALL THE BAG.**



- Insert left side of the bag into the enclosed hole on the left side of the side bagger frame.



- Insert the right side of the bag into the slot as shown.

**STEP 4: INSTALL THE LIFT HANDLE AND CHECK OPERATION.**




- Locate the parallel frame bars on the bag frame.
- Choose and mark the desired location of the handle in between the two cross sections of the parallel bars.
- Cut a small slit in the mesh cover where the mark is.
- Insert the provided 3/8 x 1 bolt between the parallel bars and secure the handle with the nylon locking nut.

**STEP 5: ADJUSTMENT AND OPERATION.**



- To release, pull up on the release handle and pull the lever handle. To re-latch, simply let go of the lever handle.

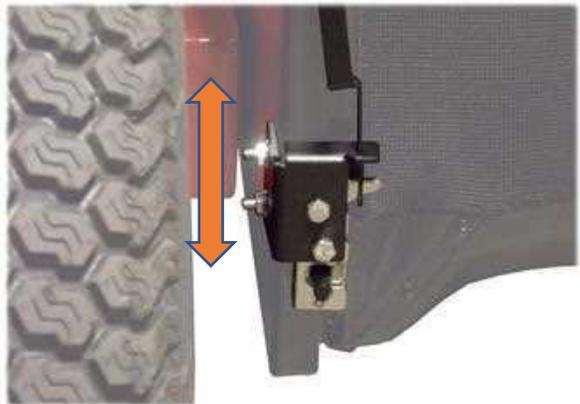

- If the latch will not lock, adjust the rotary latch up or down until the striker portion of the bag frame locks.